
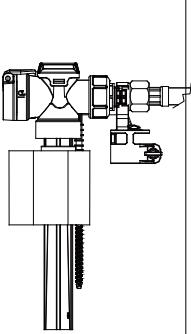
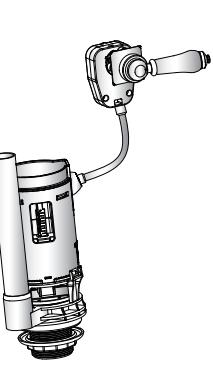
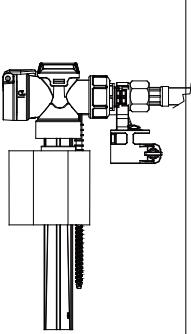
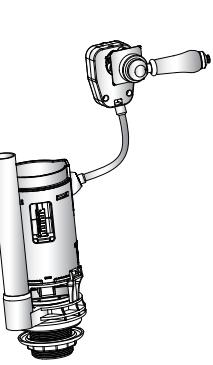
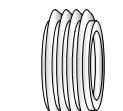


Parts supplied:

		 Plug 1x	 Bolt 2x	 Flush Cone 1x	 Fixing Nut 1x
		 Lever 1x	 Plastic Washer 1x	 Cone Washer 1x	 Flush Cone 1x
Inlet Valve 1x	Flush Valve 1x	Lever 1x	Plastic Washer 1x	Cone Washer 1x	Flush Cone 1x

- Please read these instructions carefully to avoid damage to the valves, and to ensure correct installation.
- Do not use bleach or bleach based cleaning products in the cistern, as these will cause damage to the seals. We cannot be held responsible or liable for any failure which results from the use of bleach based products.
- Water temperature range +2C to +45C.
- Water pressure 0.2 to 8 bar.

1: Flush Valve installation

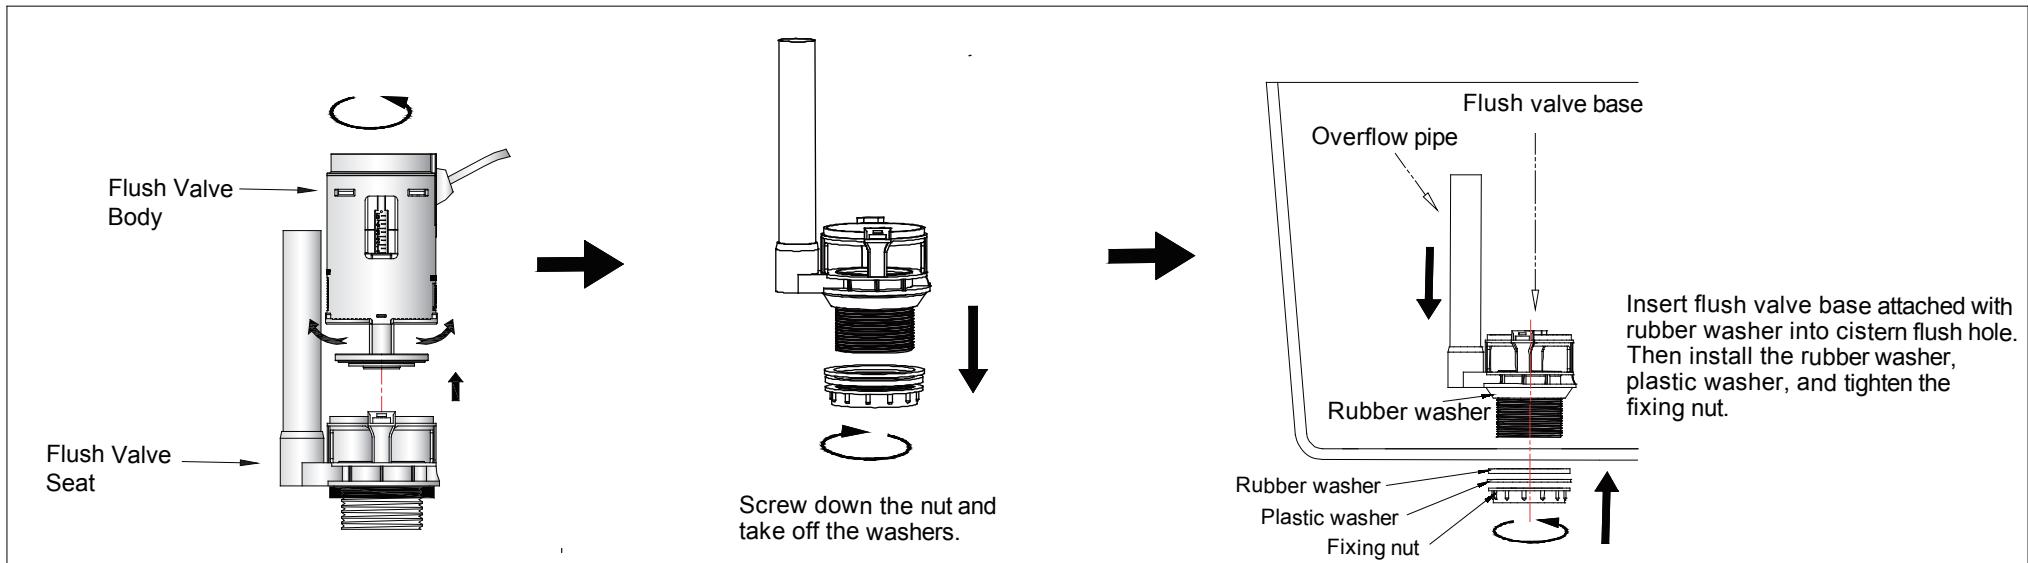


2: Flush Valve scale and adjustment setting


Note: The Flush Valve should be adjusted for the required flush volume.

The diagram "A" below indicates the correct setting for 6L full flush and 3L half flush.

The diagram "B" below indicates the correct setting is for 4.5L full flush and 2.6L half flush.

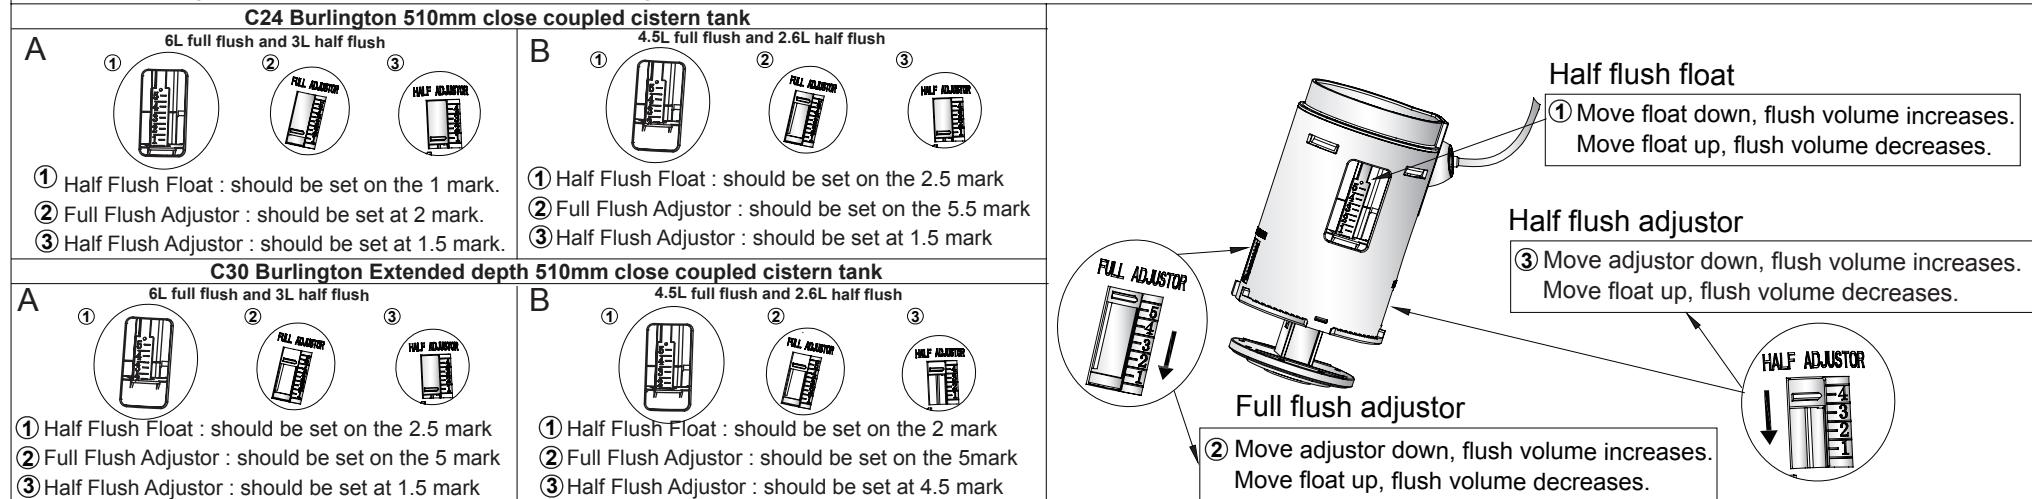


3: Installation Option for Close coupled or Low level

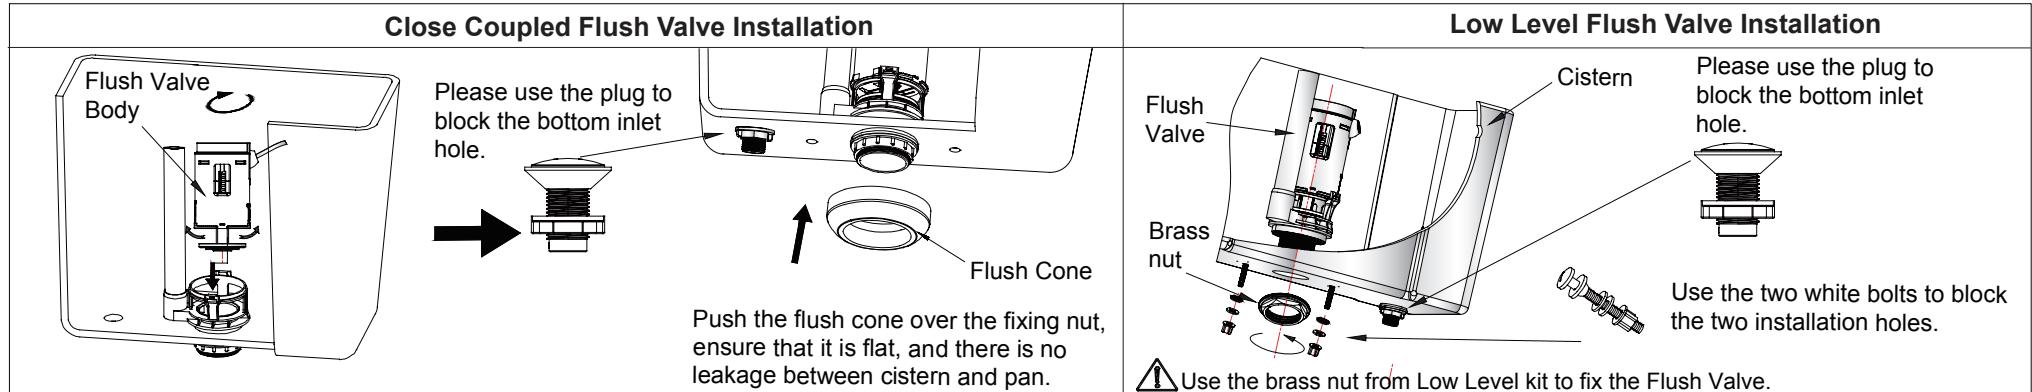


4: Flush Valve trouble shooting

Problem	Reason	Solution
Leakage	1. Incorrect installation. 2. Flush valve seat does not fit flush valve body. 3. Flush valve body is stuck.	1. Install again according to the correct installation procedure. 2. Install again. 3. Disconnect and wash flush valve body.
No flush, low flush or half flush volume	Cable is distorted.	Remove kinks or sharp bends in the cable.
Half flush water level is too high or too low.	Water level is adjusted incorrectly.	Adjust water level.

1: Inlet Valve adjustment settings and Installation

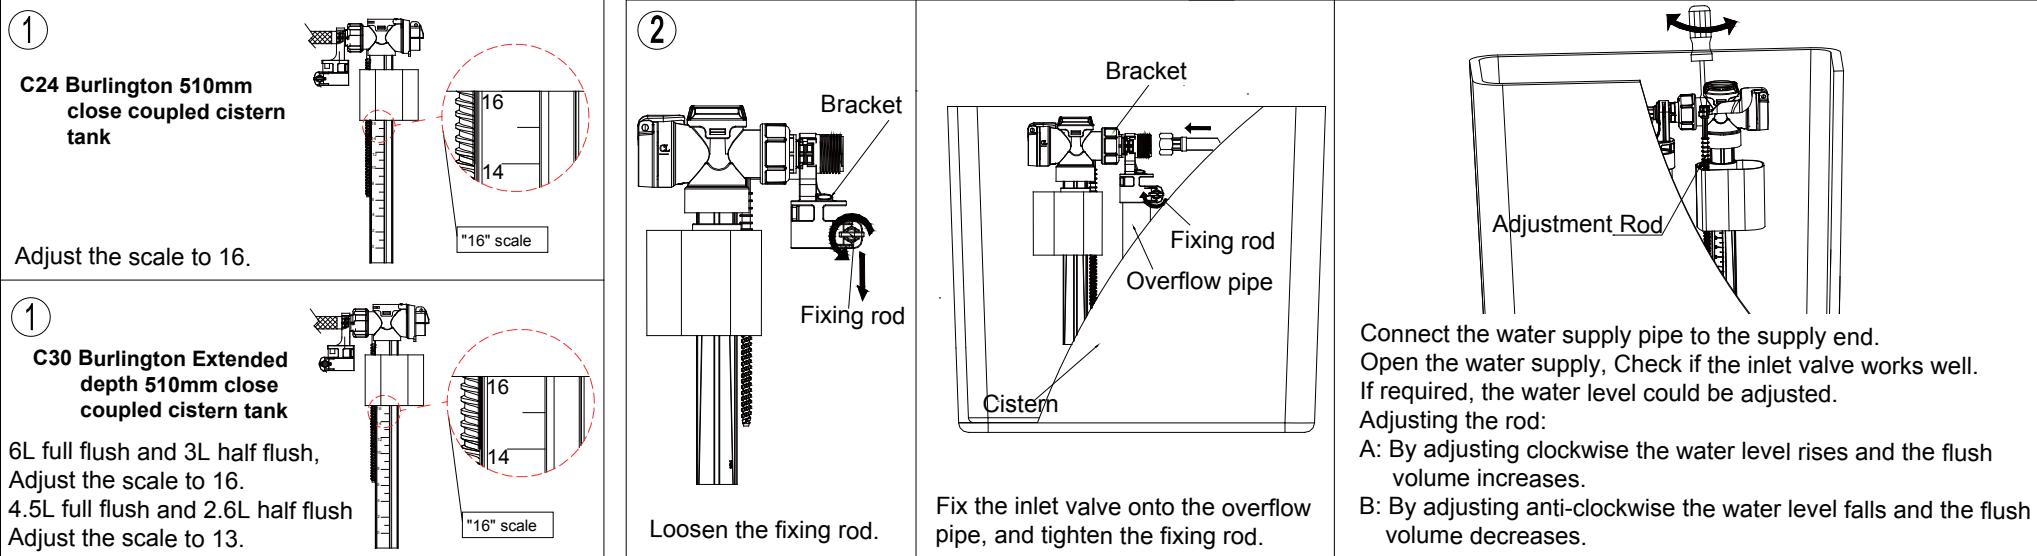

2: Filter cleaning (Please clean periodically)

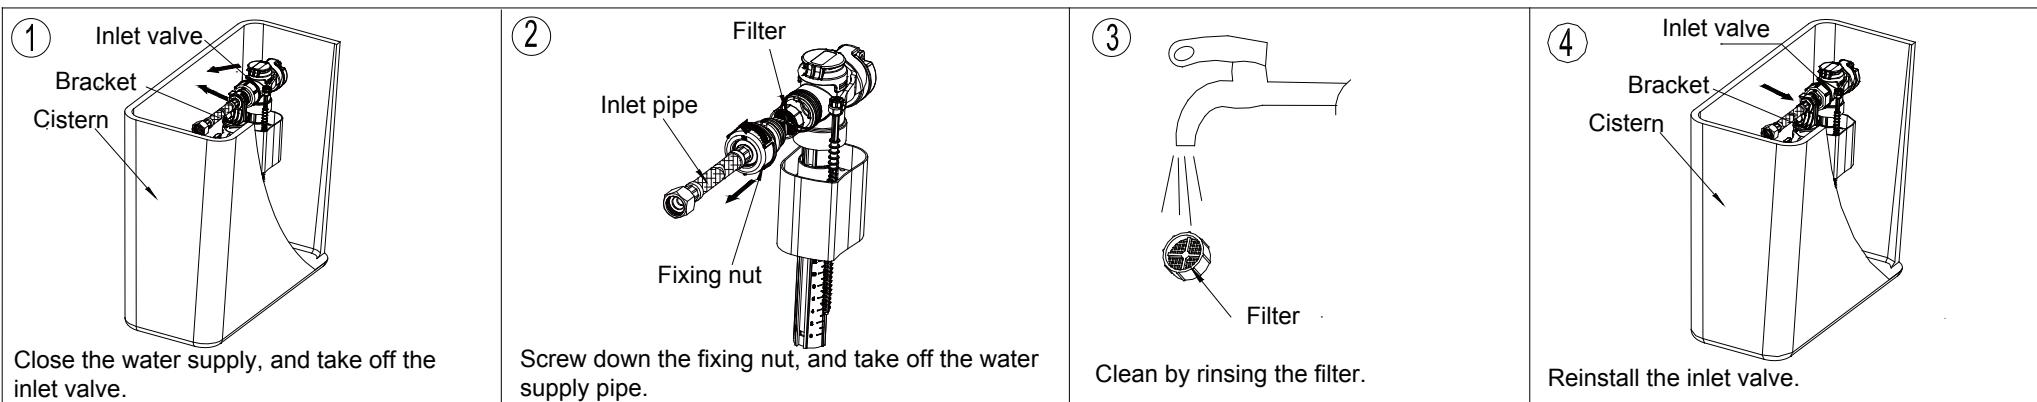


3: Inlet Valve trouble shooting



Problem	Reason	Solution
Incorrect water level	Incorrect adjustment.	Adjust the Water level correctly.
Inlet Valve does not work	Water supply is closed.	Open the water supply
	The filter is blocked.	Clean the filter.
	The Stop Float is pressed by the tank.	Readjust the direction of the inlet valve.
Leakage	The Inlet Valve fixing nut has not been tightened.	Tighten the nut.

Close Coupled Cistern & Flush Level Installation


1: Install Close Coupled Cistern To Pan

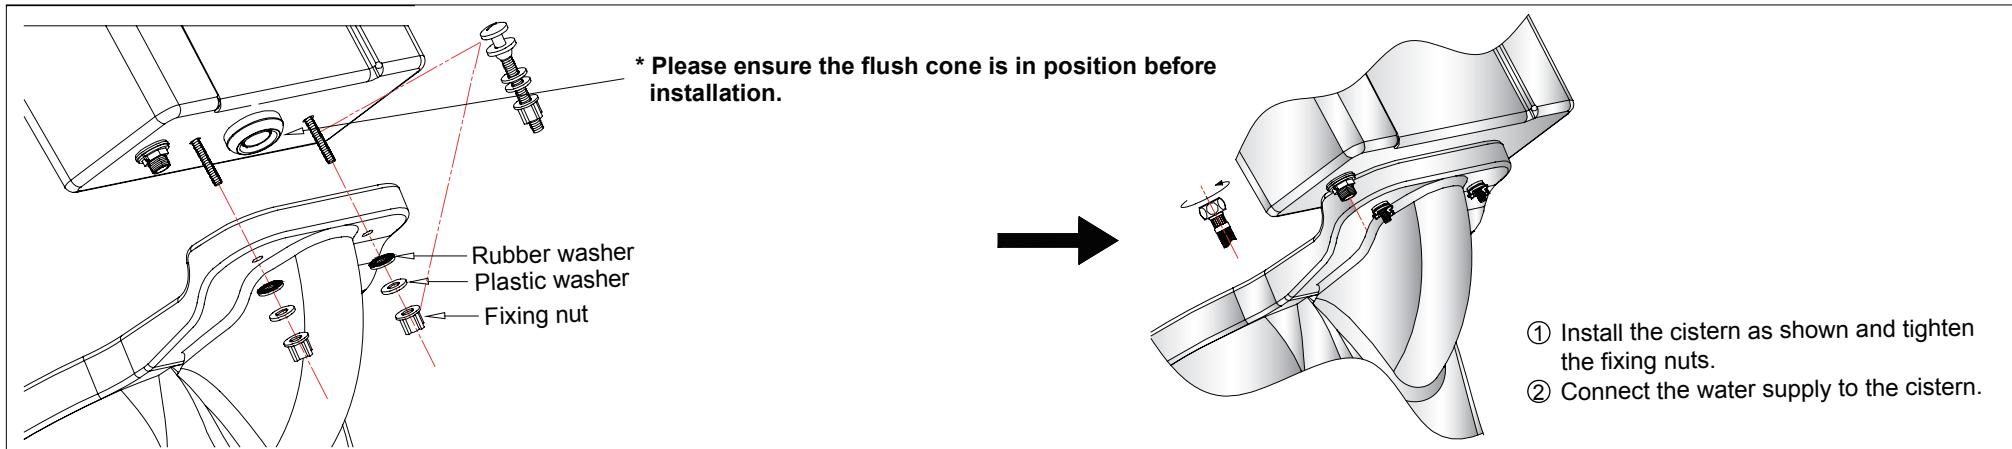

2: Install Lever

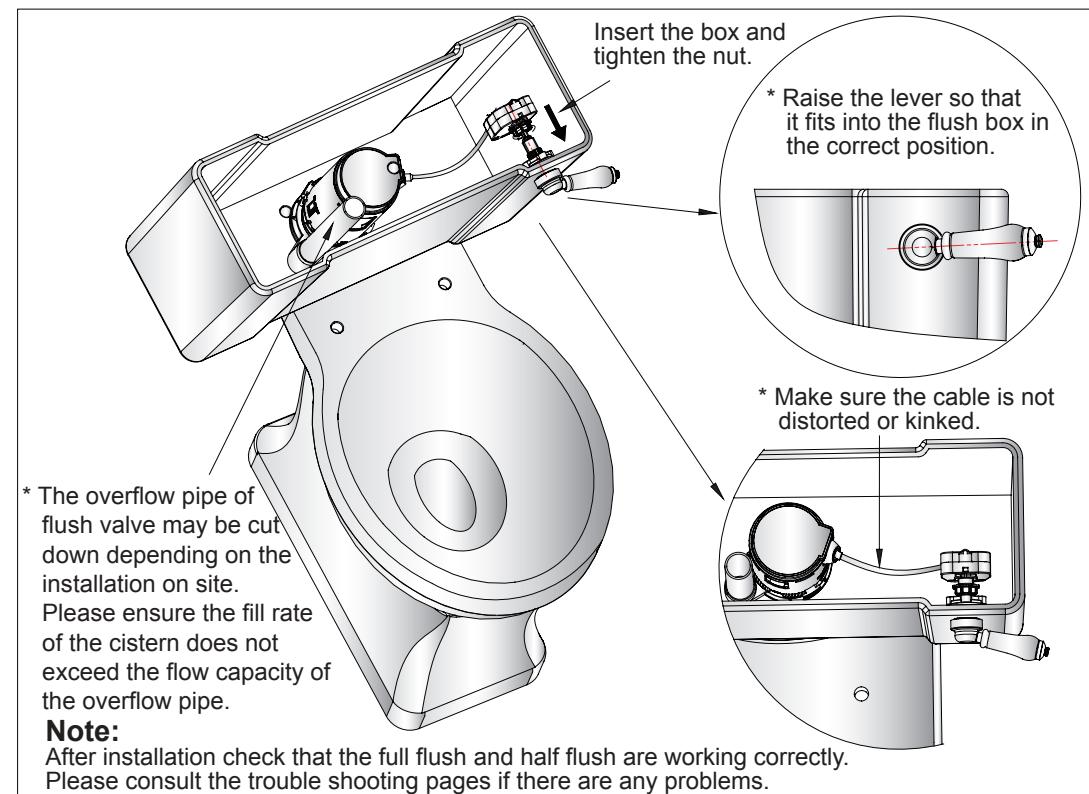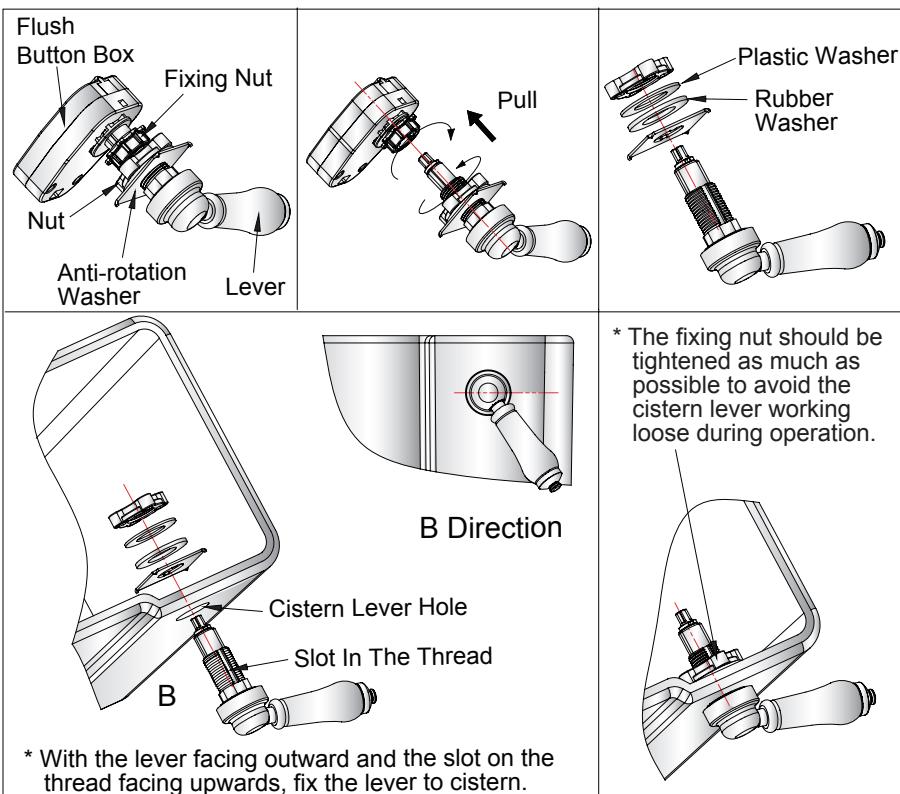

Low Level Cistern Installation

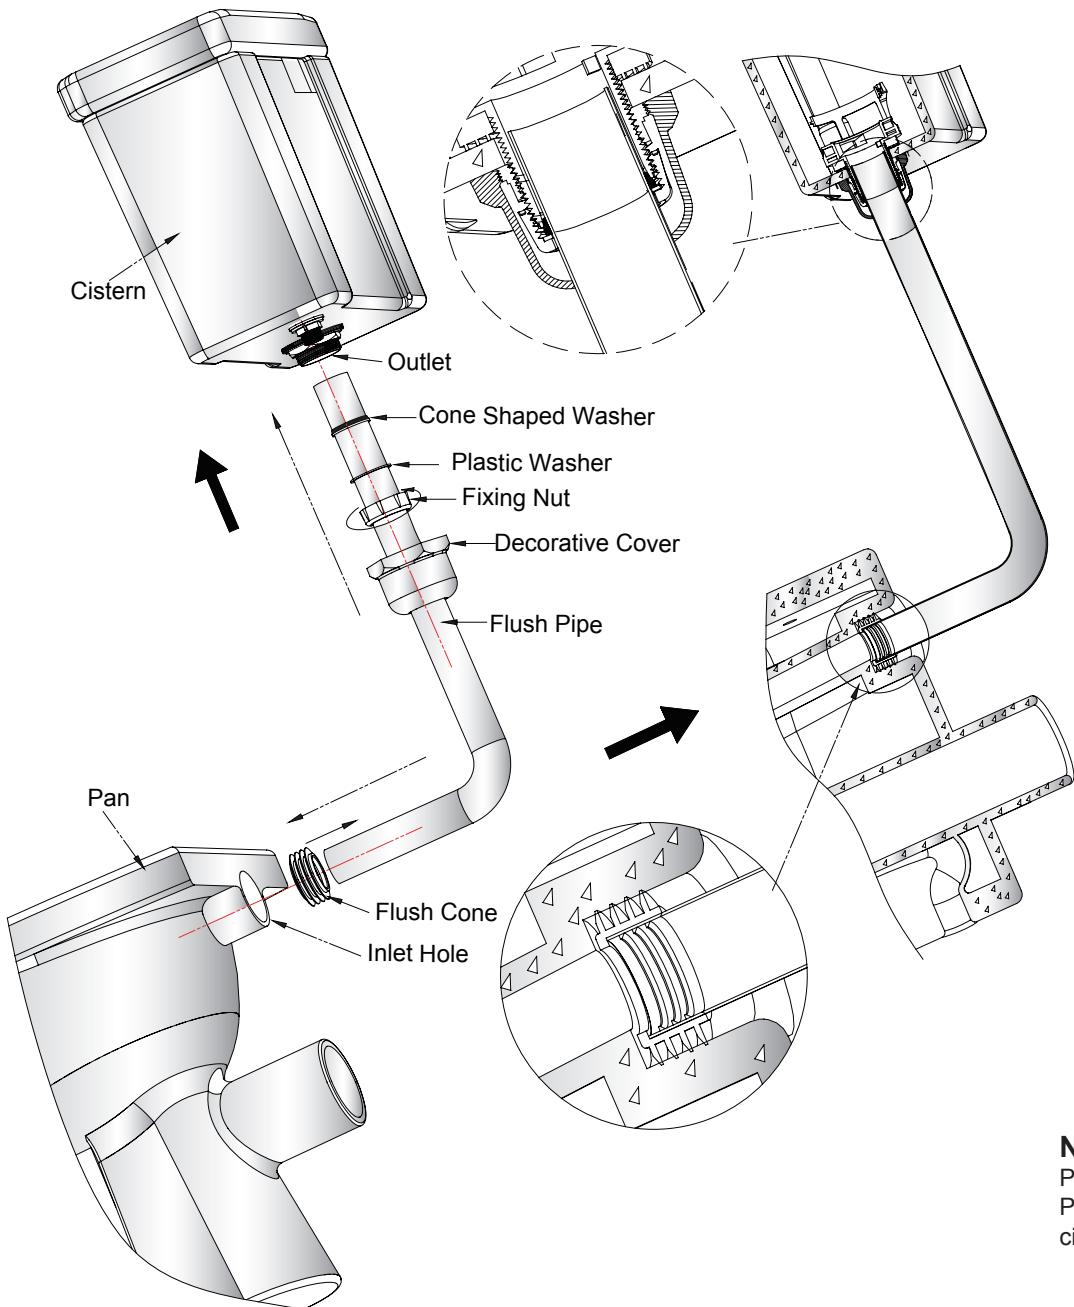

Determine the exact location of the pan and cistern installation, then cut the Flush Pipe accordingly if necessary.
Fit the Pipe into the cistern in the sequence shown in the diagram. Then insert the Flush Cone into the pan, followed by the Flush Pipe as shown in the diagram.

Note:

Please carefully check for leaks after installation.
Please use two white bolts to block the two fixing holes on the bottom of cistern, cut the bolts to suitable length if necessary.