
















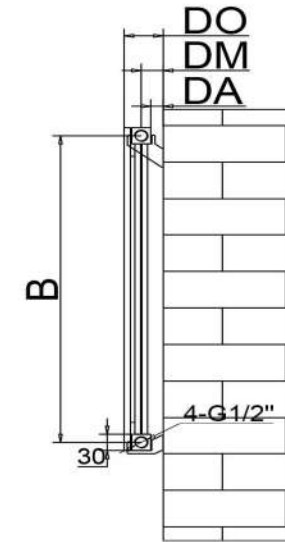
 
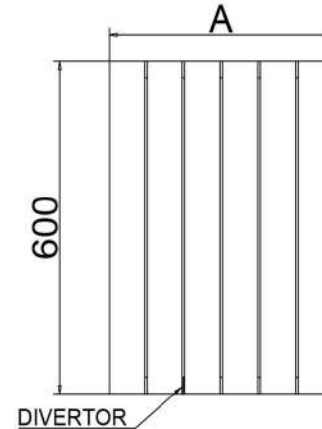


# PIATTO INSTALLATION GUIDE



This product must be fitted only by a fully qualified installer.

Description	Illustration	Qty
Radiator		1
Top Bracket		2
Bottom Bracket		2
Fixing Screw		4
Spacer		4
Air Vent		2
Vent cover		2

Description	Illustration
Fixings choose the appropriate fixing for the wall material if required	
PTFE tape	
Electric drill	
Masonry drill bit appropriate to the fixings	
Adjustable spanner	
Radiator valve Hex Key	
Flat head and Philips head screw drivers	
1 Lock shield valve and 1 Gate or Thermostatic valve	
Spirit level	
Measuring tape	



*This picture represents appearance look of a radiator.*

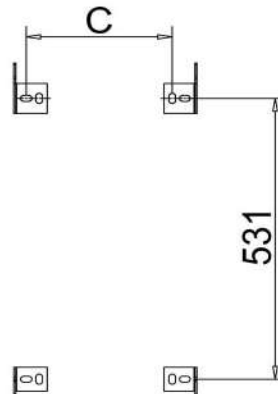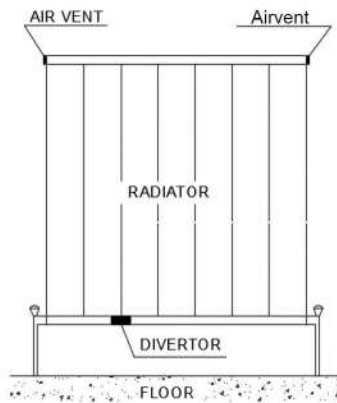







NAMES		A	B	C	TUBE QTY	DA	DM	DO
A-PTO060044SA	600	445	570	262.5	6	20	35	62
A-PTO060044SW	600	445	570	262.5	6	20	35	62
A-PTO060059SA	600	595	570	412.5	8	20	35	62
A-PTO060059SW	600	595	570	412.5	8	20	35	62
A-PTO060082SA	600	820	570	637.5	11	20	35	62
A-PTO060082SW	600	820	570	637.5	11	20	35	62
A-PTO060104SA	600	1045	570	862.5	14	20	35	62
A-PTO060104SW	600	1045	570	862.5	14	20	35	62
A-PTO060119SA	600	1195	570	862.5	16	20	35	62
A-PTO060119SW	600	1195	570	862.5	16	20	35	62
A-PTO060142SA	600	1420	570	862.5	19	20	35	62
A-PTO060142SW	600	1420	570	862.5	19	20	35	62











## GENERAL RECOMMENDATION


- Before fitting the radiator it is necessary to wash out the heating system to remove any existing mud, scale, work residues, traces of flux, oil, etc.
- When the system water pH is outside the 8,5-5,5 range and/or when the dissolved is above 0,1mg/liter, it is always needed to protect the heating system components (the radiator is one of these) with a proper chemical treatment compatible with all parts in contact with water (silicon rubber too).
- In order to fit the radiator to the wall, it is necessary to choose the proper fixings for the wall material.
- If the system water exceeds °50C, please install a warning mark near the radiator to avoid any accidental scalding.
- Clean the radiator surface only with a soft cloth to avoid scratching the finish and do not use chemical agents during cleaning operations. It is prohibited to climb on the radiator.
- Maximum working temperature °95C, maximum working pressure 4 bar.

# PIATTO INSTALLATION GUIDE



This product must be fitted only by a fully qualified installer.

Description	Illustration	Qty
Radiator		1
Top Bracket		2
Bottom Bracket		2
Fixing Screw		4
Spacer		4
Air Vent		2
Vent cover		2

Description	Illustration
Fixings choose the appropriate fixing for the wall material if required	
PTFE tape	
Electric drill	
Masonry drill bit appropriate to the fixings	
Adjustable spanner	
Radiator valve Hex Key	
Flat head and Phillips head screw drivers	
1 Lock shield valve and 1 Gate or Thermostatic valve	
Spirit level	
Measuring tape	

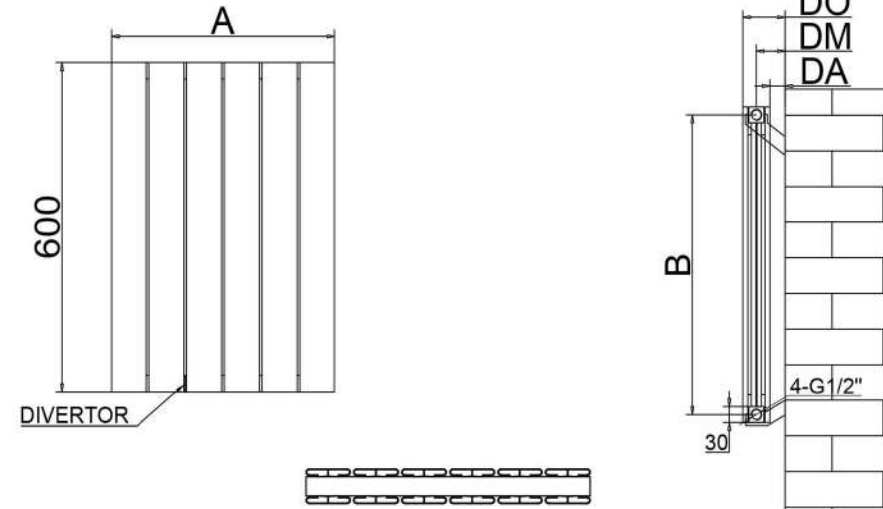

This picture represents appearance look of a radiator.

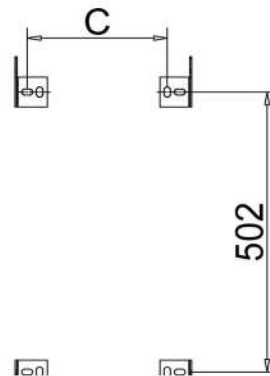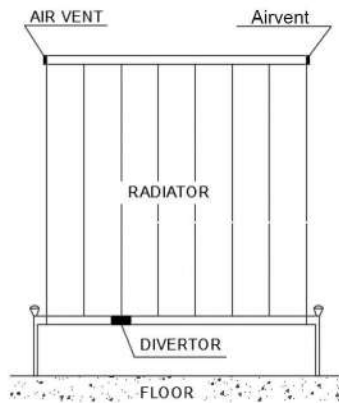

NAMES		A	B	C	TUBE QTY	DA	DM	DO
A-PTO060044DA	600	445	570	262.5	6	30.5	57	83.5
A-PTO060044DW	600	445	570	262.5	6	30.5	57	83.5
A-PTO060059DA	600	595	570	412.5	8	30.5	57	83.5
A-PTO060059DW	600	595	570	412.5	8	30.5	57	83.5
A-PTO060082DA	600	820	570	637.5	11	30.5	57	83.5
A-PTO060082DW	600	820	570	637.5	11	30.5	57	83.5
A-PTO060104DA	600	1045	570	862.5	14	30.5	57	83.5
A-PTO060104DW	600	1045	570	862.5	14	30.5	57	83.5
A-PTO060119DA	600	1195	570	862.5	16	30.5	57	83.5
A-PTO060119DW	600	1195	570	862.5	16	30.5	57	83.5
A-PTO060142DA	600	1420	570	862.5	19	30.5	57	83.5
A-PTO060142DW	600	1420	570	862.5	19	30.5	57	83.5

## GENERAL RECOMMENDATION

- Before fitting the radiator it is necessary to wash out the heating system to remove any existing mud, scale, work residues, traces of flux, oil, etc.
- When the system water pH is outside the 8,5-5,5 range and/or when the dissolved is above 0,1mg/liter, it is always needed to protect the heating system components (the radiator is one of these) with a proper chemical treatment compatible with all parts in contact with water (silicon rubber too).
- In order to fit the radiator to the wall, it is necessary to choose the proper fixings for the wall material.
- If the system water exceeds °50C, please install a warning mark near the radiator to avoid any accidental scalding.
- Clean the radiator surface only with a soft cloth to avoid scratching the finish and do not use chemical agents during cleaning operations. It is prohibited to climb on the radiator.
- Maximum working temperature °95C, maximum working pressure 4 bar.