


Varispray Wall Outlet 15mm – 22mm Conversion Guide

Internal Components

- A. Support ring
- B. Central 'O' ring
- C. 'O' ring housing
- D. Support washer
- E. Outer 'O' ring

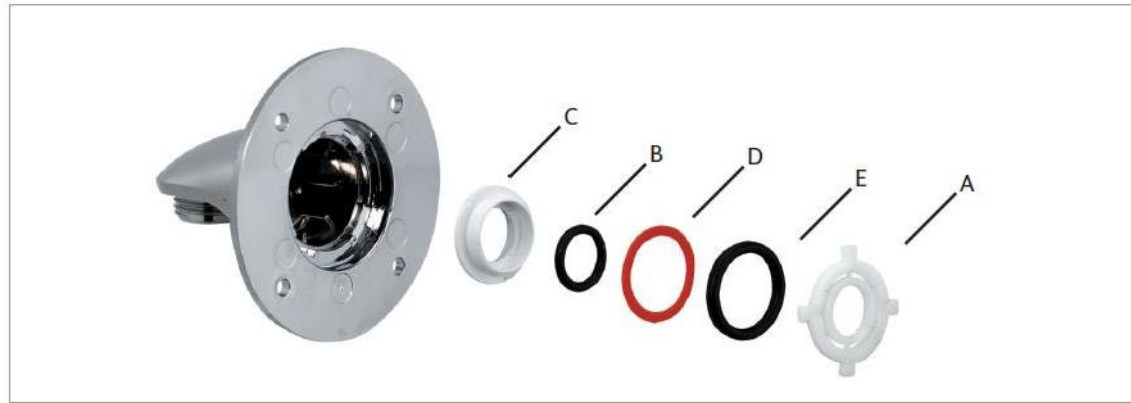

1. Remove the support ring (A) by turning it anti clockwise to unlock the bayonet fitting.
2. Remove the support central 'O' ring (B) before removing the 'O' ring housing (C), the support washer (D) and the outer 'O' ring (E).
3. Re-fit the support washer (D) and the outer 'O' ring (E) so that they sit against the ledge inside the outlet body.

4. Push out the centre section of the support ring (A) to enable it to take 22mm pipe.



5. Re-fit the support ring (A), rotating it clockwise until it locks into position.