

INSTALLATION INSTRUCTIONS


PRIOR INSTALLATION PLEASE ENSURE THAT THE WATER SUPPLY IS "OFF".

FIT TO BATH BEFORE FITTING IN POSITION WHERE POSSIBLE.

- 1 Remove the "T" connection from spout fixing thread.
- 2 Fit the spout to the spout body and secure by tightening the fixing screw located in the pop-up rod slot in the spout body by using screw driver.
- 3 Fit the spout flange to the spout body.
- 4 Fit the seal to the flange then fit the spout assembly into the desired position on the bath.
- 5 Hold the spout assembly in position, fit the rubber washer and brass backnut. Fully tighten nut.
- 6 Remove the collar and flange from on the 2 side valves.
- 7 Fit the "T" connection to the spout body.
- 8 Fit the flexible connecting pipe to the "T" body and the side body.
- 9 With the valve in position fit seal and screw on the flange and collar.
- 10 Repeat operations 8 & 9 (inc) for the second valve.
- 11 Fully tighten the cap nuts on "T" connection and side valves.
- 12 Fit shrouds and heads to side valves.
- 13 Attach waterfeed to side valves.
- 14 Fit the cone connection on the hose to the handset, feed the hose through the handset holder and connect to "T" connector using the knurled lock nut.
- 15 Turn on the water supply and check for leaks.
- 16 It is recommended the flow straighteners/aerators be removed and the system flushed of any debris.

Please Note: It is recommended that this product is fitted by an approved plumber/installer

3/4 TAP HOLE DECKMOUNTED BATH FILLER

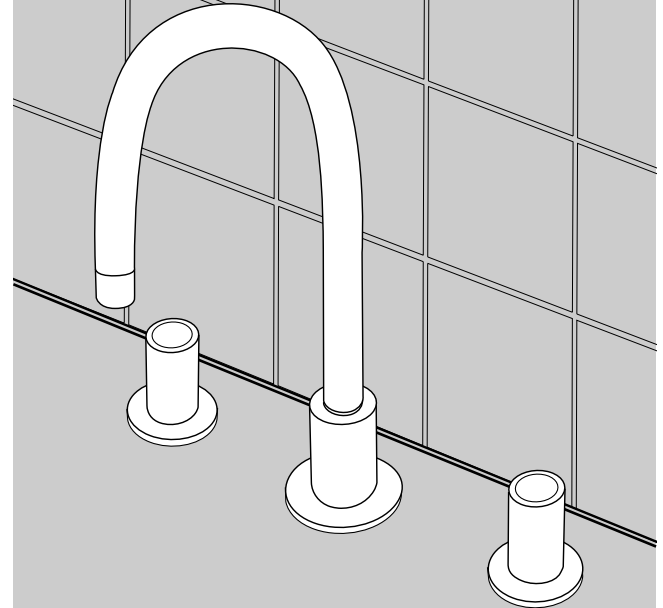

INSTALLATION GUIDE

ISSUE 2002

3/4 TAP HOLE DECKMOUNTED BATH FILLER

LIST OF PARTS

Spout Assembly (1 off each)

- Consists:
- Spout
 - Spout body & fixing thread
 - Flange
 - Spacer
 - Backnut & washer
 - "T" connection

Side Valve (2 off each)

- Consists:
- Body, ceramic disc valve, splined insert & fixing screw assembly
 - Flange
 - Collar
 - Rubber washer
 - Backnut

Flexible Connection Tubes (2 off each)

Please Note: It is recommended that this product is fitted by an approved plumber/installer.

