


Installation instructions

Please follow these care instructions to ensure your product retains its high quality finish - **and retain this leaflet for future reference.**

1. Identify all components are present prior to installation
2. This product suit for installation bathtub thickness:5-25mm
3. Pls confirm the wash pipe clear and without any sundries before installation

Installation step

1. Revolve the overflow cover(1)out
2. Place washer(3) into overflow elbow(4)plane,and then traverse bathtub overflow hole then connect overflow cover(1) to overflow elbow(4) screw
- 3.Revolve waste body(12),take out the rubber gasket(12)
- 4.waste flange(9)traverse bathtub waste hole put on rubber gasket(11) lock tight waste body(12)
- 5.Put the waste cover(6) in the waste flange (9)
- 6.Align overflow elbow(4)with waste body (12) water inlet direction,put on plastic pipe(5)(As right picture)
- 7.After installation,pls open faucet and test if there is leakage,make sure all of parts are installed at right position and can be used normally

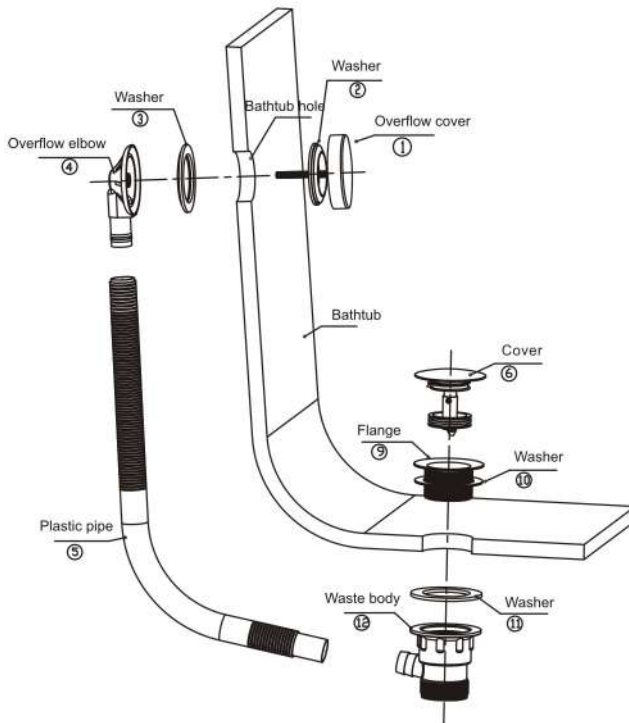

We recommend this product is fitted by a fully qualified installer. The installation must comply with all current water regulations. In order for this product to operate as designed, it must be installed and commissioned as stated in this manual, and in line with current best plumbing practice.