



HOME


FITTING INSTRUCTIONS

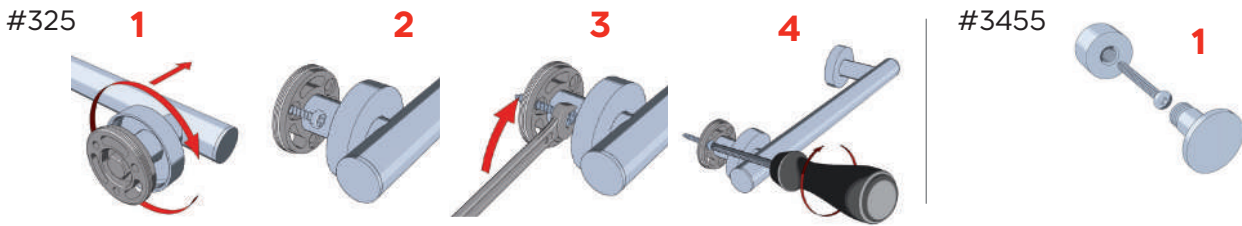

#320	#341	#355
#3231	#3411	#356
#326	#3414	#358
#327	#342	#359
#332	#343	#361
#333	#344	#369
#3364	#3464	#370

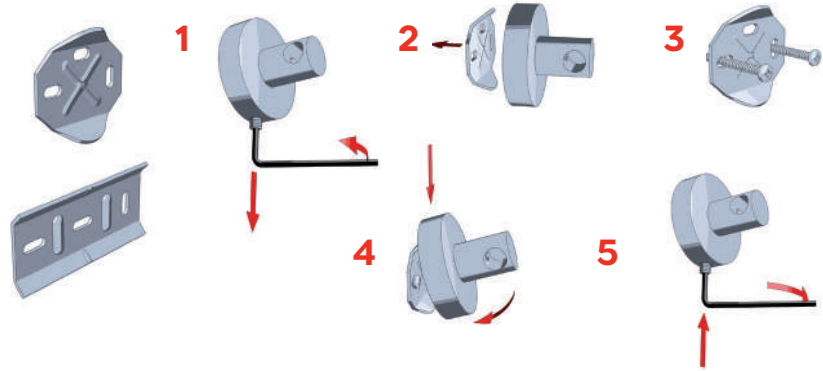


#3455




Mounting plate for glue is bought separately
 Monteringsbeslag för lim köpes separat
 Monteringsbeslag til lim købes separat
 Monteringsbeslag for lim kjøbes separat
 Limattava asennurbanslevy ostetaan erikseen
 Montageplatten um kleben separat kaufen

Not to glue: grab bars (#225, #325), towel rails (#226, #326, #328), hooks (#245, #259, OK327) and AIR

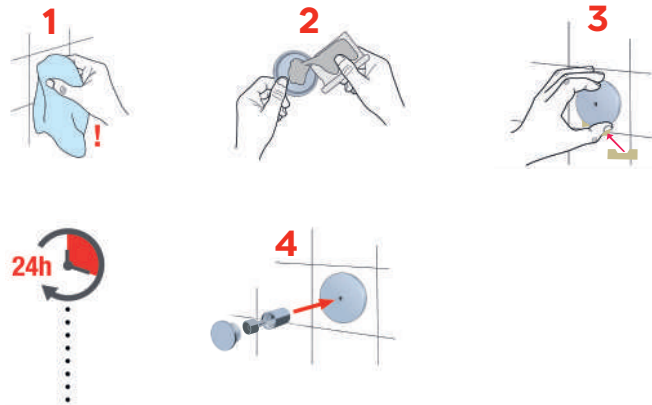

#320	#3411	#356
#3231	#3414	#358
#327	#342	#359
#332	#343	#361
#333	#344	#369
#3364	#3464	#370
#341	#355	

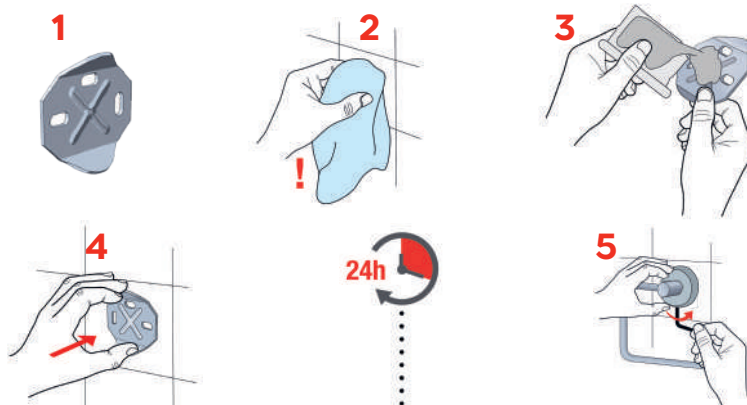

Not recommended for mounting on wet room wallpaper.
 Rekommenderas ej för montering på våtrumstapet.
 Montering på våtrumstapet anbefales ikke.
 Montering på våtromstapet anbefales ikke.
 Ei suositella asennettavaksi märkätilojen tapetille.
 Nicht für die Montage auf Tapeten in Feuchträumen geeignet.



www.smedbo.net

