

Installation Instructions



Ancillary Components	
4	Wall Plug (a)
4	Bracket Base (b)
4	Washer (c)
4	Wall Screw (d)
4	Bracket Stem (e)
4	Mini Screw (f)
1	Hexagon Key (g)

PLEASE READ THESE INSTRUCTIONS THOROUGHLY BEFORE COMMENCING INSTALLATION.

PLEASE CHECK THAT ALL ANCILLARY COMPONENTS ARE PRESENT AND THAT THE PRODUCT HAS NOT SUFFERED ANY DAMAGE DURING TRANSIT.


Installation should be carried out by a suitably qualified professional or other fully competent person & in accordance with the relevant British and European standards (BS7593:2006, EN12828:2003, EN12831:2003 & EN14336:2004) & all applicable Building Regulations.

When drilling or fixing into walls, floors or ceilings it is essential that you check for pipes & wires before commencing. Please ensure that you wear all necessary personal protective equipment.

This product carries a warranty against faulty materials & manufacturing defects. The warranty does not cover any defect arising from damage, negligence, usage outside the products intended purpose or fair wear & tear. The warranty does not cover pinholes or other issues caused by insufficient cleansing or protection of the central heating system.

Regular cleaning with a soft cloth will keep the surface of your product looking new. Soapy water can be used to remove stubborn marks. Do not use abrasive or chemical cleaners as these will damage the surface finish over time.

1. Wind a thick layer (at least 6 turns) of PTFE tape, clockwise around the radiator valve tails (not supplied), screw the radiator valve tails into the bottom two threads in the upright channels & tighten firmly with a 22mm or adjustable spanner.
2. Check that the wall is strong enough to hold the weight of the towel rail. Mark your preferred bracket positions on the wall and drill holes for the fixings you intend to use. The wall plugs supplied are only suitable for solid walls and you will need alternative fixings for other wall types.
3. Screw the bracket bases to the wall using the washers & wall screws provided or alternative fixings. The holes for the mini screws should be facing downward.
4. Screw the bracket stems into the threads on the back of the towel rail.
5. Align the bracket stems with the bracket bases and push the towel rail back into position.
6. Hold the towel rail back against the wall and tighten the grub screws with the hexagon key provided.
7. Connect the radiator valves (not supplied) and fill the system to check for leaks and fix as necessary.
8. Flush the entire system with a DWTA approved central heating cleanser and then refill using a DWTA approved central heating protector.
9. Run the system up to full temperature and release any trapped air using the air vent plug. The installation is finished.

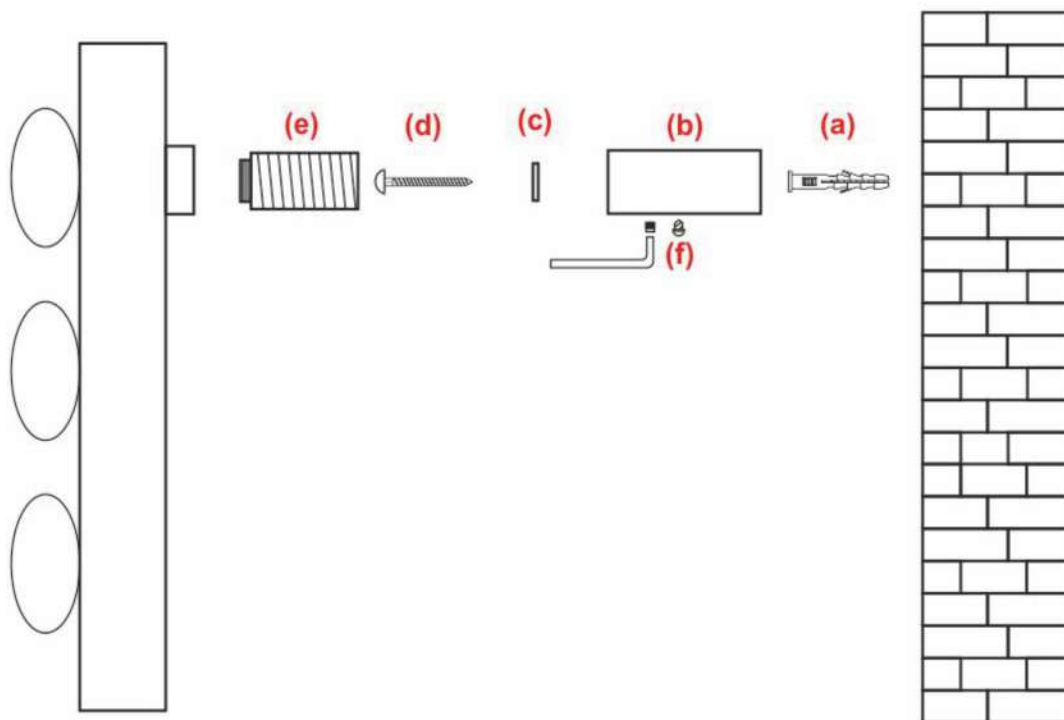

Reaction to fire: **A1**
 Release of dangerous substances: **None**
 Maximum operating pressure: **400 kPa**
 Surface temperature: Maximum **110°C**
 Resistance against corrosion: **No corrosion after 100 h humidity**
 Resistance against minor impact: **Class 0**



Made in Turkey