
Installation Instructions






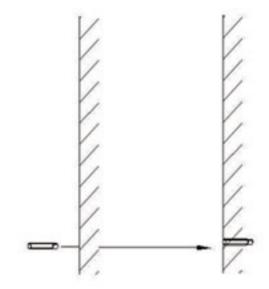



Step 1: Check the components to make sure all are included as above.

Step 2: Pinpoint the positions on the wall then drill four holes accordingly and fix the wallplugs into the wall.


with screws.

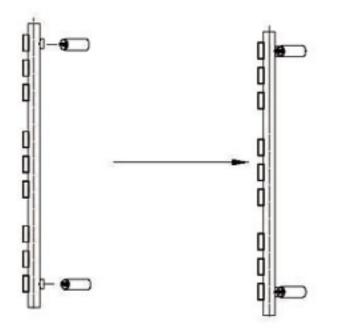



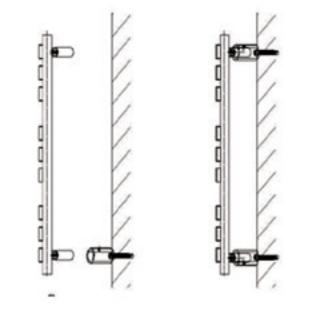

Step 5: Mount the towel rail to the wall and tighten the crews in the brackets.

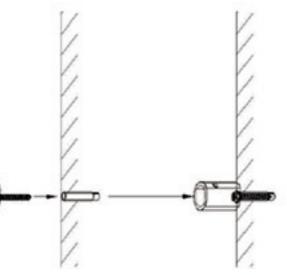

Step 3: Connect the bracket socket to the wall