



# ROSE PH+FH

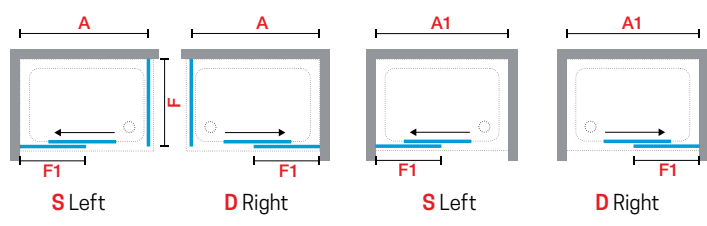

CORNER SOLUTION, 1 SLIDING DOOR + 1 FIXED PANEL IN LINE AND 1 SIDE PANEL

Dimensions					Code	Right	Left	Glass		Profile	
Size	Actual size With side panel	For recess	Fixed panel	Access		D-	S-	1	4	B	K
A		A1	F1	*				Clear	Satin	Silver	Chrome
<b>DOOR</b>											
120	117↔120	115↔118	62	47	<b>ROSEPH117</b>	D-	S-	●			
130	127↔130	125↔128	67	52	<b>ROSEPH127</b>	D-	S-	●			
140	137↔140	135↔138	72	57	<b>ROSEPH137</b>	D-	S-	●			
150	147↔150	145↔148	77	62	<b>ROSEPH147</b>	D-	S-	●			
160	157↔160	155↔158	82	67	<b>ROSEPH157</b>	D-	S-	●			
170	167↔170	165↔168	92	67	<b>ROSEPH167</b>	D-	S-	●			
180	177↔180	175↔178	102	67	<b>ROSEPH177</b>	D-	S-	●			
<b>OPTIONAL - CLOSING KIT WITH MAGNETIC PROFILES FOR RECESS VERSION</b>											
					<b>KROSPHPN-</b>					B	K
Actual size			Fixed panel	Access		D-	S-	1	4	B	K
F								Clear	Satin	Silver	Chrome
<b>REVERSIBLE MATCHING SIDE PANEL</b>											
70	68↔71	-	-	-	<b>ROSEFH68-</b>	-	-				
76	71↔74	-	-	-	<b>ROSEFH71-</b>	-	-				
76	74↔77	-	-	-	<b>ROSEFH74-</b>	-	-				
80	76↔79	-	-	-	<b>ROSEFH76-</b>	-	-	●			
80	78↔81	-	-	-	<b>ROSEFH78-</b>	-	-				
90	88↔91	-	-	-	<b>ROSEFH88-</b>	-	-	●			
100	98↔101	-	-	-	<b>ROSEFH98-</b>	-	-	●			
110	108↔111	-	-	-	<b>ROSEFH108-</b>	-	-				
120	118↔121	-	-	-	<b>ROSEFH118-</b>	-	-				

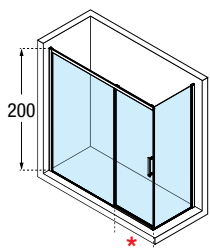

Construction of the Code:

Code + Left / Right + Glass + Profile = Final product Code

**IN STOCK UK**  
(Other products)  
Please check availability



NEW GLASS HOLDING SUPPORT

**GLASS TYPE**



Clear  
code 1

Satin  
code 4

**PROFILE COLOURS**



Silver  
code B

Chrome  
code K

## TECHNICAL DATA

### PROFILE COLOURS



Silver  
code B

Chrome  
code K



### GLASS TYPE 6 mm (European Standards UNI EN 14428)



Clear  
code 1



Satin  
code 4

### HANDLES



Crystal handle  
Interaxis 256 mm



Crystal handle



Chromed metal handle




Chromed metal handle



Chromed metal handle


### OPTIONAL

### OVERALL DIMENSIONS FIXING PROFILES

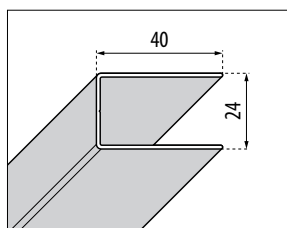


**WALL**  
R - PHB - PH+F - A

Perfis	Code
White	<b>P01BEAST-A</b>
Silver	<b>P01BEAST-B</b>
Chrome	<b>P01BEAST-K</b>

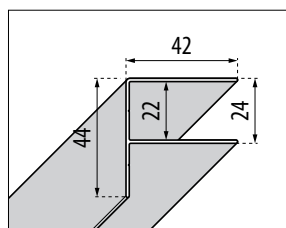


**WALL**  
2A - B - 3P - G - S - 2M - 2P

Perfis	Code
White	<b>P01BEGST-A</b>
Silver	<b>P01BEGST-B</b>
Chrome	<b>P01BEGST-K</b>

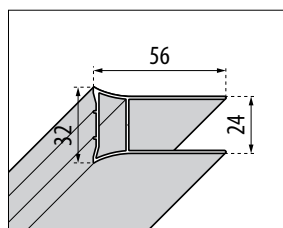

**EXTENSION**  
R - PHB - PH+F - A



Perfis	Code
White	<b>P05ROSST-A</b>
Silver	<b>P05ROSST-B</b>
Chrome	<b>P05ROSST-K</b>

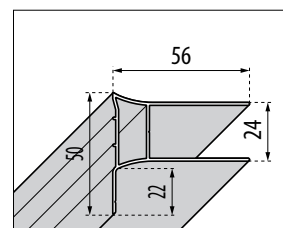


**EXTENSION**  
2A - B - 3P - G - S - 2M - 2P

Perfis	Code
White	<b>P05ROSCST-A</b>
Silver	<b>P05ROSCST-B</b>
Chrome	<b>P05ROSCST-K</b>

### HOW TO TAKE THE MEASUREMENTS

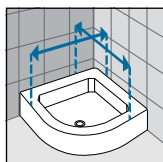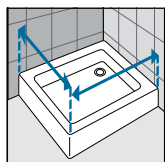

Take the measurements from wall to the external edge of the shower tray. Dimensions must be taken once the walls are finished and tiled, according to the above drawings.

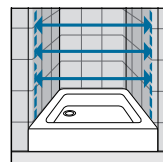

Take the measurements from wall to wall at the bottom, at the top, in the middle and use the smallest. Dimensions must be taken once the walls are finished and tiled, according to the above drawings.