

# ROSE R

QUADRANT SHOWER ENCLOSURE, 2 SLIDING DOORS + 2 FIXED PANELS



200 cm




6 mm



3 cm



## GLASS TYPE



Clear  
code 1



Satin  
code 4

## PROFILE COLOURS







Silver  
code B



Chrome  
code K

Dimensions						Code	Left	Right	Glass		Profile	
Size	Actual size		Fixed panels		Access		D-	S-	1	4	B	K
	A	B	F1	F2	*				Clear	Satin	Silver	Chrome
80	76,5↔79,5	-	23	-	38	<b>ROSER80-</b>	-	-	●			
90	86,5↔89,5	-	33	-	51	<b>ROSER90-</b>	-	-	●			
100	96,5↔99,5	-	43	-	51	<b>ROSER100-</b>	-	-	●			
OFFSET VERSION												
80 x 100	76,5↔79,5	96↔99,5	23	43	44	<b>ROSER80100</b>	D-	S-	●			
80 x 120	76,5↔79,5	116,5↔119,5	23	63	44	<b>ROSER80120</b>	D-	S-	●			
90 x 100	86,5↔89,5	96↔99,5	33	43	51	<b>ROSER90100</b>	D-	S-	●			
90 x 120	86,5↔89,5	116,5↔119,5	33	63	51	<b>ROSER90120</b>	D-	S-	●			

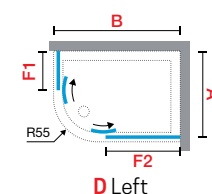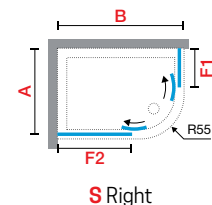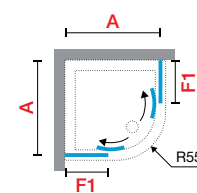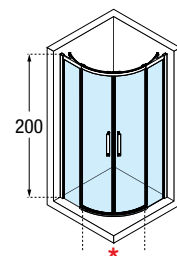

ASYMMETRIC VERSION ONLY FOR FLOOR INSTALLATIONS

● IN STOCK UK

(Other products)  
Please check availability

Construction of the Code: **Code** + **Left / Right** + **Glass** + **Profile** = Final product Code

## TECHNICAL DATA

### PROFILE COLOURS



Silver  
code B

Chrome  
code K



### GLASS TYPE 6 mm (European Standards UNI EN 14428)



Clear  
code 1



Satin  
code 4

### HANDLES



Crystal handle  
Interaxis 256 mm



Crystal handle



Chromed metal handle




Chromed metal handle



Chromed metal handle


### OPTIONAL

### OVERALL DIMENSIONS FIXING PROFILES

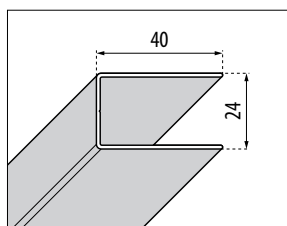


**WALL**  
R - PHB - PH+F - A

Perfis	Code
White	<b>P01BEAST-A</b>
Silver	<b>P01BEAST-B</b>
Chrome	<b>P01BEAST-K</b>

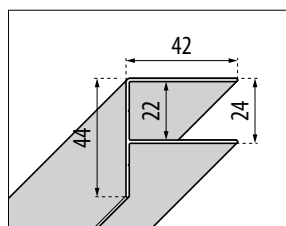


**WALL**  
2A - B - 3P - G - S - 2M - 2P

Perfis	Code
White	<b>P01BEGST-A</b>
Silver	<b>P01BEGST-B</b>
Chrome	<b>P01BEGST-K</b>

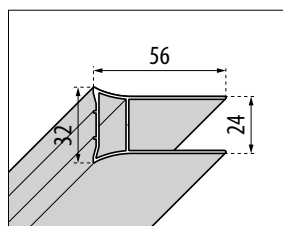

**EXTENSION**  
R - PHB - PH+F - A



Perfis	Code
White	<b>P05ROSST-A</b>
Silver	<b>P05ROSST-B</b>
Chrome	<b>P05ROSST-K</b>

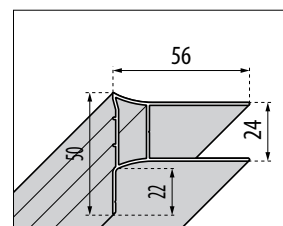


**EXTENSION**  
2A - B - 3P - G - S - 2M - 2P

Perfis	Code
White	<b>P05ROSCST-A</b>
Silver	<b>P05ROSCST-B</b>
Chrome	<b>P05ROSCST-K</b>

### HOW TO TAKE THE MEASUREMENTS

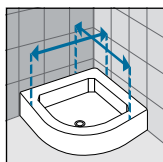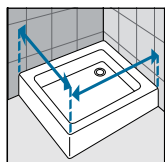

Take the measurements from wall to the external edge of the shower tray. Dimensions must be taken once the walls are finished and tiled, according to the above drawings.

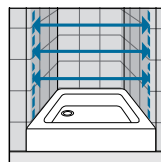

Take the measurements from wall to wall at the bottom, at the top, in the middle and use the smallest. Dimensions must be taken once the walls are finished and tiled, according to the above drawings.