


## Round/Square Shower Handset Kit

Installation & aftercare instructions  
Please retain for future reference

### Installation Procedure:

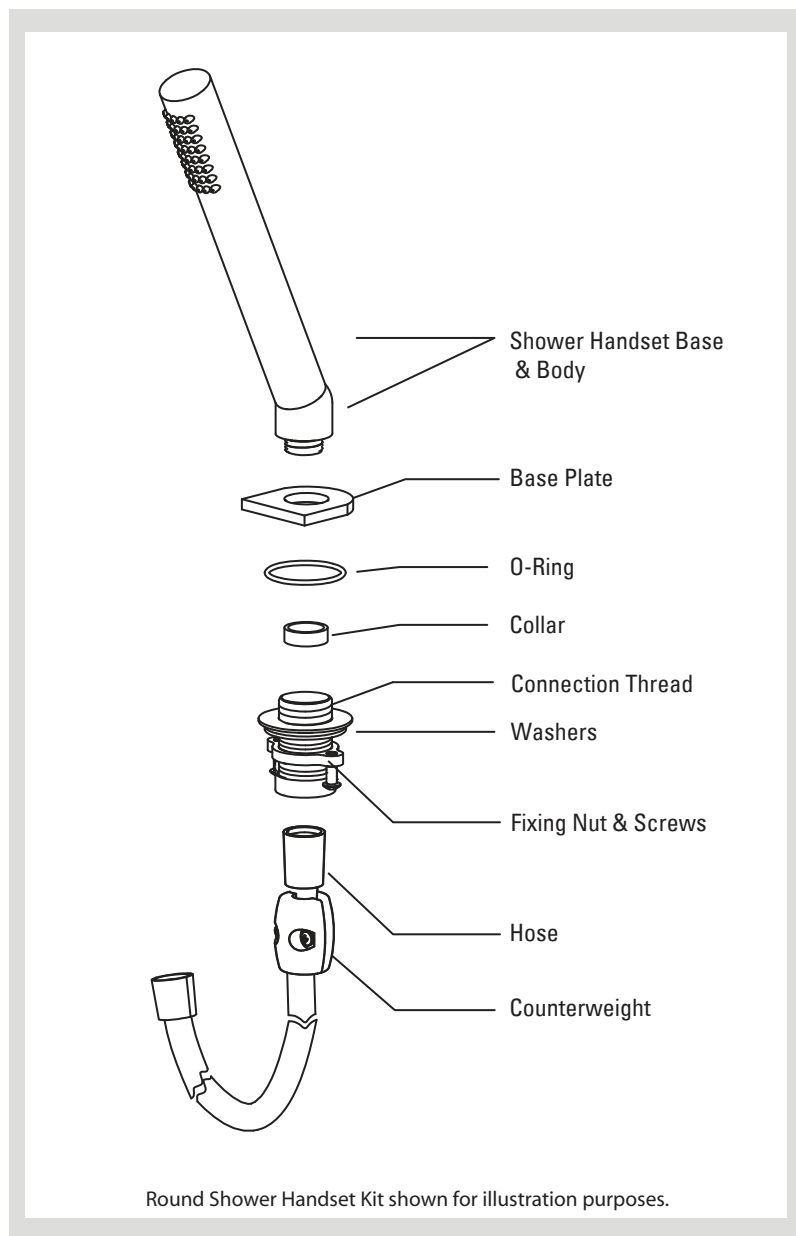

1. Attach the counter weight to the shower hose, allowing enough room for the hose to be retracted to an appropriate length later.

2. Remove the collar from the top of the connection thread and feed the shower hose through the bottom of the thread.

3. The collar is tapered slightly and there is a visible difference in the wall thickness of the tube at either end. Using the split in the collar, position it on the shower hose so that the end with the thinner wall thickness is visible out the top of the connection thread.

4. Ensuring that the washers and fixing collar on the connection thread are on the underside of the bath tub, and the base plate is above, screw the base plate onto the connection thread.

5. Tighten the fixing collar to secure the connection thread to the underside of the bath tub and tighten the screws into the washers to form a water-tight seal.

6. Screw the two parts of the shower handset together before screwing into the hose connection.

7. Connect the other end of the shower hose to the water supply.

8. Test that the handset and hose can be removed from the base plate freely, and check the system for any leaks.



## ROPER RHODES

Customer Service

Tel: 01225 303 900 Fax: 01225 448 877

Email: [sales@roperrhodes.co.uk](mailto:sales@roperrhodes.co.uk)

[www.roperrhodes.co.uk](http://www.roperrhodes.co.uk)

Roper Rhodes Limited

Brassmill Lane Trading Estate, Bath, BA1 3JF

**Product Codes:**  
**Round: T221505**  
**Square: T131502**

REF: AR.RR.T221505 | 08.13 V1.00