



WI1060 WI1060

## WARNING


To avoid the risk of electrocution, please turn off the electricity supply mains before commencing the installation.




Keep the plastic corner protectors on until installation is fully completed.

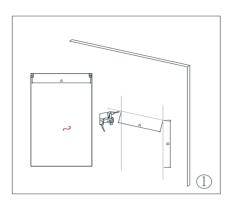


Measure the distance of the mounting hole, Drill holes with a suitable sized drill.

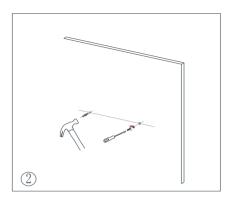

Insert the wall plug and mounting screw into the wall.

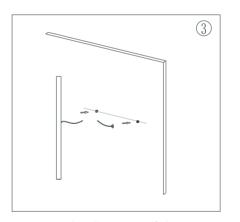

Measure the distance of the mounting hole, Drill holes with a suitable sized drill.

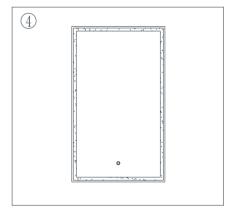

Peel off protective film and clean the mirror with damp cloth.

## After care

Never use bleach based or window cleaning solution as these may damage the backing of the mirror. We recommend a damp cloth to remove splashes.