









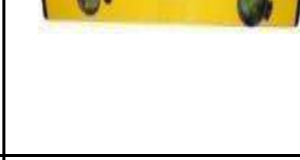
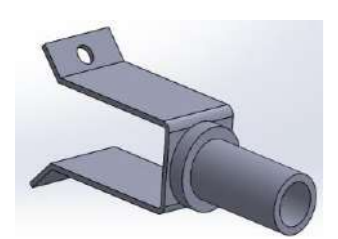


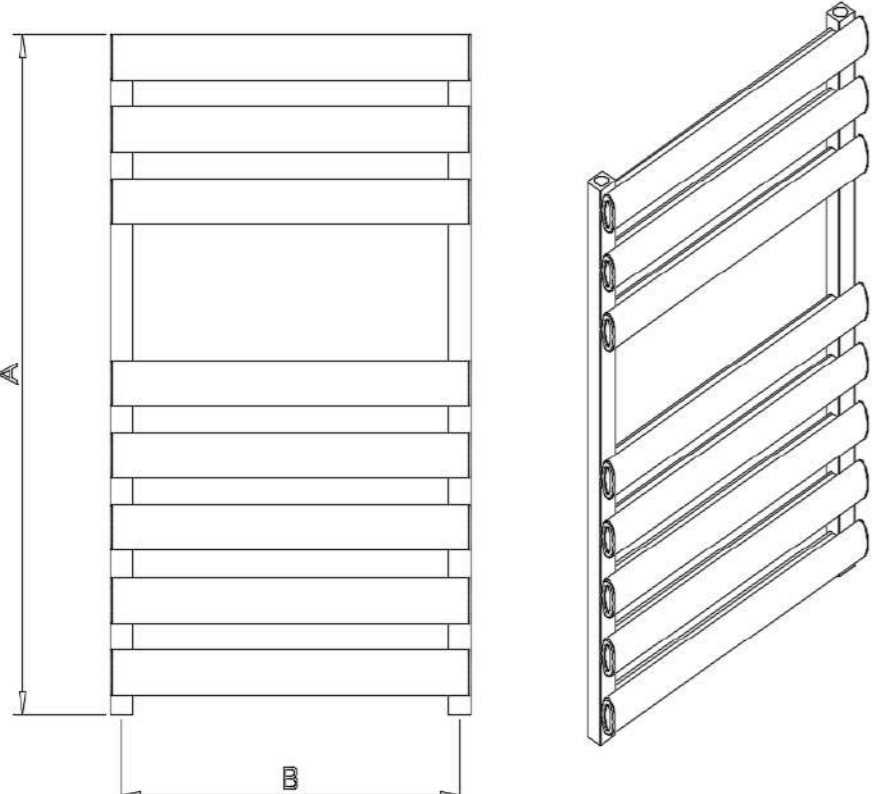




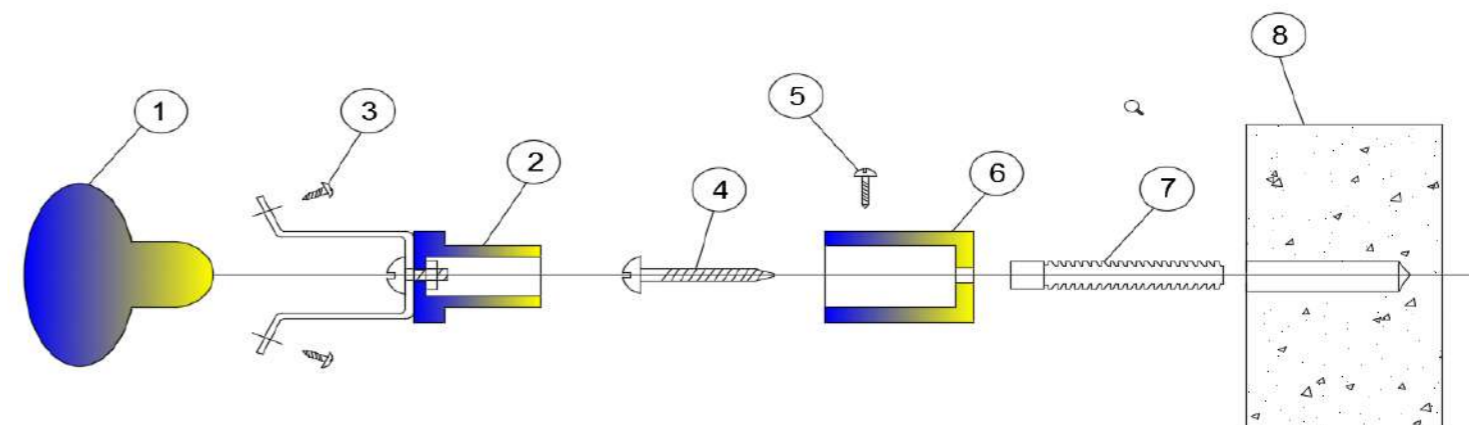




VEROLI INSTALLATION GUIDE

This product must be fitted only by a fully qualified installer.

DESCRIPTION	DESCRIPTION	ILLUSTRATION
	Fixing choose the appropriate fixing for the wall material if required	
	PTFE tape	
	Electric drill	
	Masonry drill bit appropriate to the fixings	
	Adjustable spanner	
	Radiator valve hex key	
	Flat head and philips head screw drivers	
	1 lock shield valve and 1 gate or thermostatic valve	
	Spirit level	
	Measuring tape	
RADIATOR x 1		
 BRACKET SET x 4	 WALL BRACKETS x 4	
 END PLUG x 1	 RAD. SCREWS x 8	 WALL SCREWS x 4
 AIR VENT x 1	 WALL ANCHORS x 4	 FIXING SCREWS x 4



1	RADIATOR
2	BRACKET SET
3	RADIATOR SCREW
4	WALL SCREW
5	FIXING SCREW
6	WALL BRACKET
7	WALL ANCHOR
8	WALL

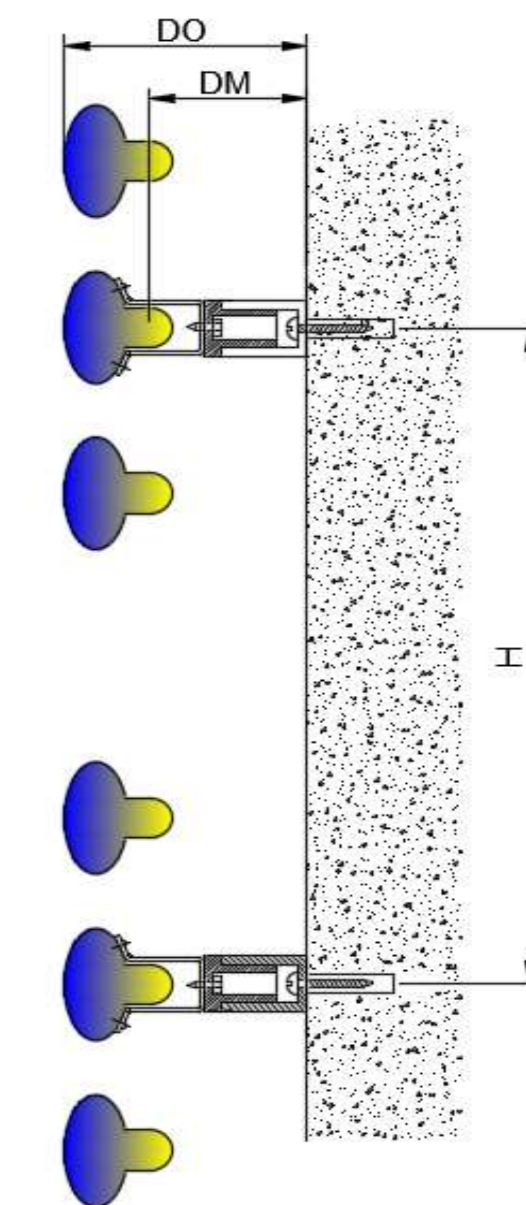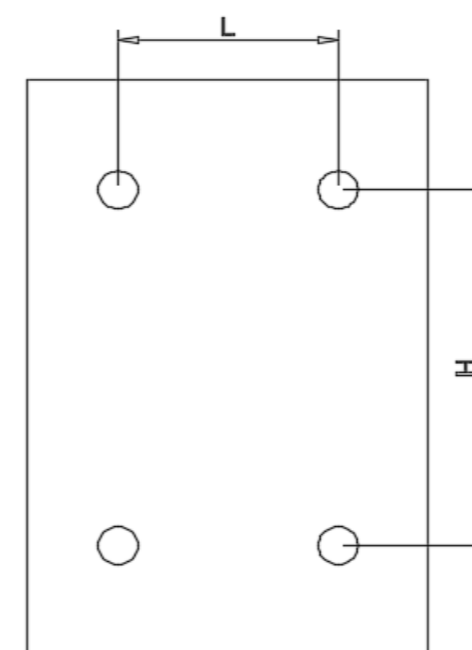

NAMES	A	B	TUBE (QTY)	DM	DO	H	L
VEROLI	750	455	8	62-82	100-120	520	355
VEROLI	1190	455	12	62-82	100-120	960	355
VEROLI	1550	455	15	62-82	100-120	1320	355

GENERAL RECOMMENDATION

- Before fitting the radiator it is necessary to wash out the heating system to remove any existing mud, scale, work residues, traces of flux, oil, etc.
- When the system water pH is outside the 5,5-8,5 range and/or when the dissolved is above 0,1mg/liter, it is always needed to protect the heating system components (the radiator is one of these) with a proper chemical treatment compatible with all parts in contact with water (silicon rubber too).
- In order to fit the radiator to the wall, it is necessary to choose the proper fixings for the wall material.
- If the system water exceeds 50°C, please install a warning mark near the radiator to avoid any accidental scalding.
- Clean the radiator surface only with a soft cloth to avoid scratching the finish and do not use chemical agents during cleaning operations. It is prohibited to climb on the radiator.
- Maximum working temperature 95°C, maximum working pressure 4 bar.